


1

Run a continuous bead of sealant around the perimeter of the kerb for the frame to sit on.
(Recommended kerb slope minimum 5 degree pitch)

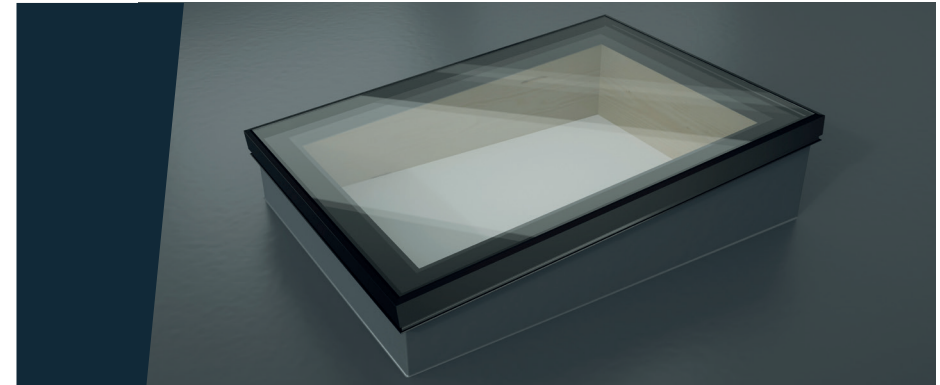


2

Position the flat rooflight onto the kerb, making sure it's central to achieve an even distance around the kerb.
(Recommended kerb width 80mm)



3

Screw the rooflight onto the kerb using appropriate fixings through the pre-drilled fixing holes.

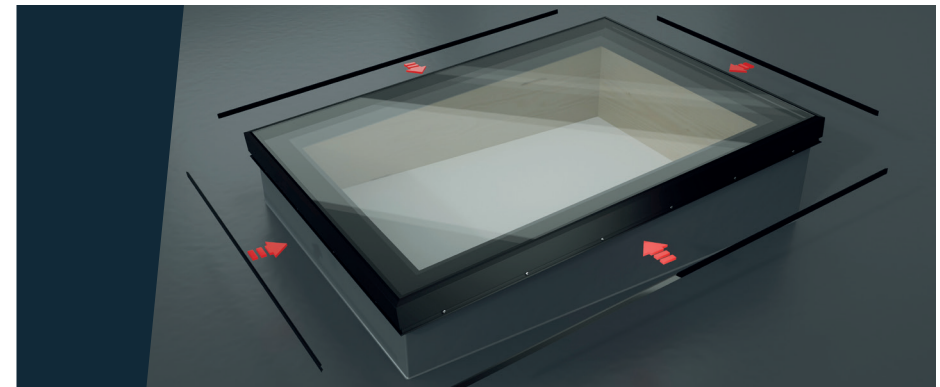

4

Fit the cover trims around the perimeter with a rubber hammer to hide the fixing screws.

LEARN MORE

For a no obligation quotation, call **02838 327741**
or email sales@atlasroofsolutions.co.uk
www.atlasroofsolutions.co.uk